




AUTOSPOUT® Kids' Bottle Care and Use Instructions

ACAUTION

- · Not for use with hot, carbonated, pulpy or perishable beverages.
- Not intended for children under 3 years of age.
- DO NOT microwave or freeze.
- DO NOT use cleaners containing bleach, chlorine, abrasives and/or other harsh chemicals.
- DO NOT continue to use if damaged.
- DO NOT carry bottles containing liquid in bags to help prevent accidental opening.


CLEANING INSTRUCTIONS

- Wash thoroughly before first use.
- RINSE LID IMMEDIATELY AFTER EACH USE with warm water and spout in the open position.
 - Remove straw for best results.
 - With underside of lid facing up, pull up on straw holder and valve assembly to separate from spout.

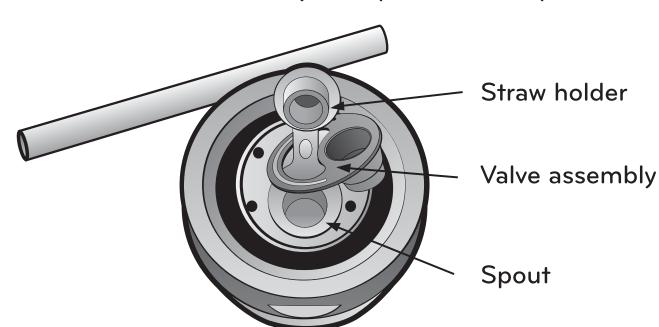




- Then wash lid in top rack of dishwasher, or soak lid for 10 minutes in hot, soapy tap water.
 - A CONTIGO® brush (available at GoContigo.com) can be used to clean the spout.
 - Rinse thoroughly.
 - Reassemble the lid prior to use. Insert valve assembly into spout, straw holder into valve assembly, and straw into straw holder. Push straw up as far as possible to nest correctly into lid.
- Bodies are top-rack dishwasher safe and can also be hand washed with warm water and a mild detergent and then rinsed thoroughly.

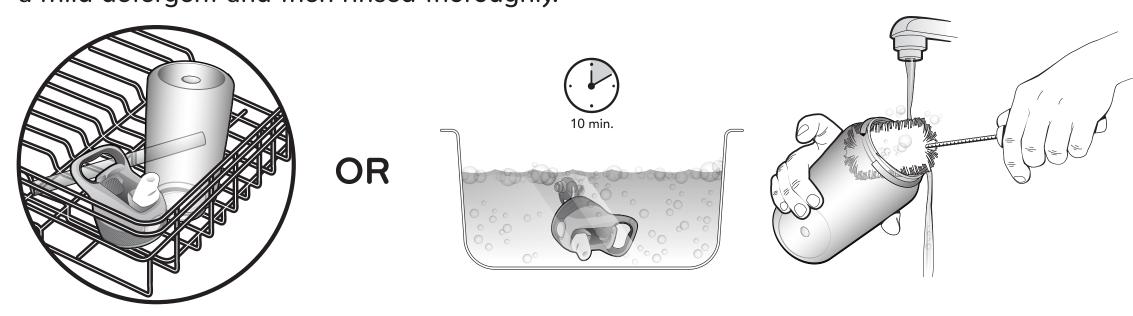

• ALWAYS STORE PRODUCT WITH LID REMOVED and spout in open position to allow parts to dry completely.

USAGE RECOMMENDATIONS:

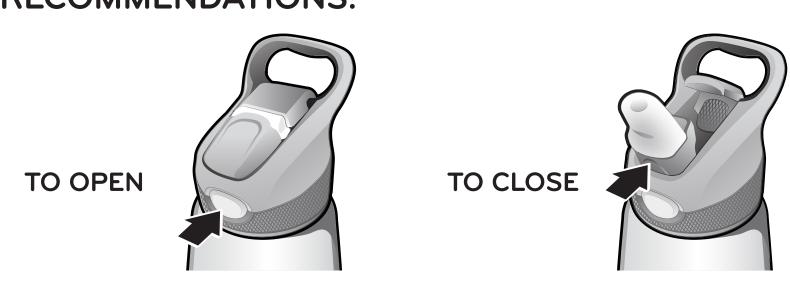

- Do not pull or rotate the spout shield as it may cause damage to the lid.
- Silicone drink spout is not removable.

ADDITIONAL CLEANING TIPS

For additional product cleaning tips visit GoContigo.com.



For complete warranty information, see GoContigo.com.

©2014 Ignite USA. All Rights Reserved.

Should you have any questions about your purchase, please contact us at 1-888-262-0622 or GoContigo.com.